


Reconn-Deck NS Bar Instructions

RDNSB

Important:

- 1. Check the Rhino-Rack website to ensure you have the latest issue of these instructions.
- 2. Please refer to your fitting instruction to ensure that the roof racks are installed in the correct locations.
- 3. Check the contents of kit before commencing fitment and report any discrepancies.
- 4. Place these instructions in the vehicle's glove box after installation is complete.
- 5. These instructions must be followed for warranty to be upheld.

Fit Time: 30mins

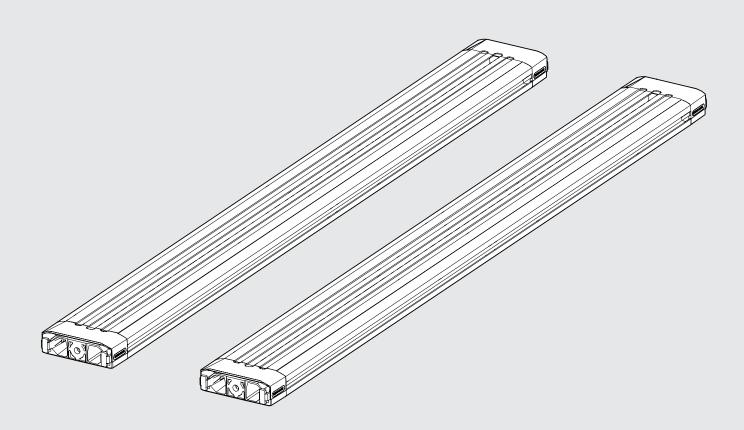

22A Hanson Pl, Eastern Creek, NSW, 2766 (02) 8846 1900 rhinorack.com.au Unit D, 2450 Airport Blvd, Aurora, CO, 80011 877-744-6622 rhinorack.com 19100 Airport Way Pitt Meadows, BC V3Y 0E2 rhinorack.ca

Document No: 520-RFI-00019 Issue No: 01

Issue Date: 06/07/2021

Carrying Capacity

Max system load capacity:

Check your vehicle owners hand book for vehicle maximum carrying capacity. Please ensure you use the vehicle manufacturers maximum load allowance if it is lower than the figure listed in this instruction.


Load must be evenly distributed over the system.




2.8kg / 6lbs

Custom fit load rating guide:

If you are assembling a custom configuration, not tested by Rhino Rack, ensure you include the total system weight into the vehicle load limit/total allowance. Use the below as a guide to calculate the cargo allowance

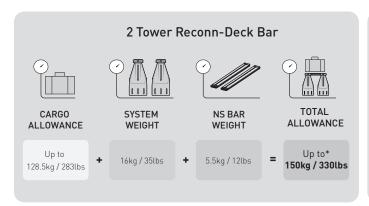

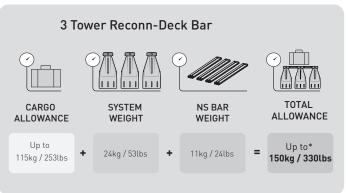

* USE THE VEHICLE MANUFACTURER'S MAXIMUM LOAD ALLOWANCE IF IT IS LOWER THEN THE FIGURE LISTED, AND THEN RE-CALCULATE THE CARGO ALLOWANCE

Warning

- Check part number or kit is correct for use with your vehicle.
- Do not attempt to fit system to your vehicle unless you fully understand these fitting instructions. Please direct any questions regarding fitting to the dealer from where it was purchased from.
- Off-road conditions can be rigorous. Extreme care must be taken in off road conditions.
- Always ensure you fasten your load securely.
- Use only non-stretch fastening ropes or straps to attach cargo to your load.

In Service Maintenance Checks

- All bolted connections should be checked after driving a short distance after installation.
- All bolted connections should be checked again at regular intervals (every 1000k (621mi) is recommended, depending on road conditions, usage, loads and distances travelled). All bolted connections should also be checked each time they are re-fitted.

Torque Settings


Unless stated otherwise in these instructions, all fasteners should be set to the following torque settings -


M6: 4-5Nm (3-4lbs/ft),

M8: 8-10Nm (6-7.5lbs/ft) and M10: 16-18Nm (12-13lbs/ft).


Note for Dealers and Fitters


It is your responsibility to ensure these fitting instructions are given to the end user or client. These instructions remain the property of Rhino-Rack Australia Pty. Ltd. and may not be used or changed for any other purpose than intended.

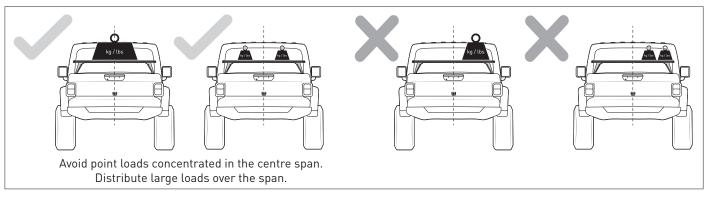

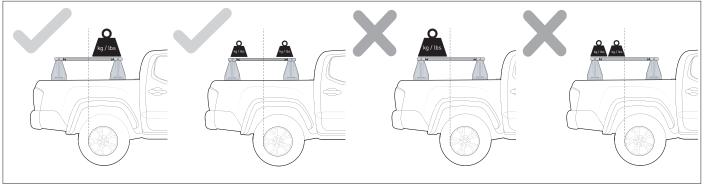



25kg maximum cantilevered load per channel. i.e. load suspended from under & side channels

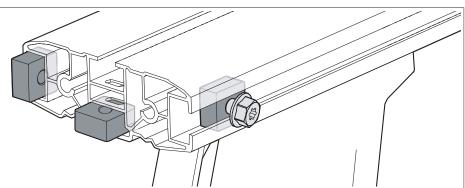

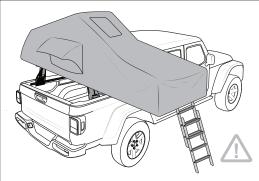


Ensure the ladder is well supported on the ground for the tent's stability. Take extreme caution when climbing heights above 1.2m/4ft.

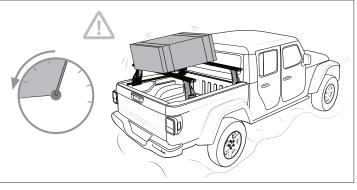

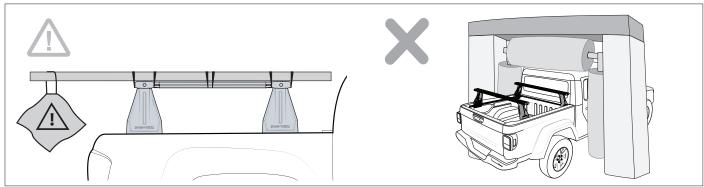



System Components


To complete the Reconn-Deck system you will need the base, leg & bar kits (accessories are recommended)

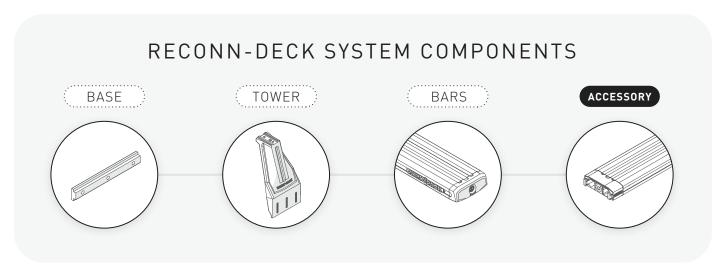


ACCESSORY Parts List

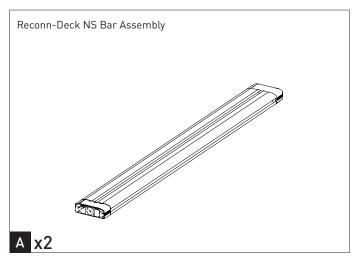


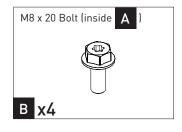


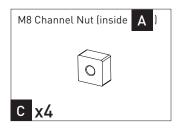


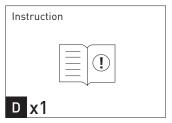


NOTE: Below components are preassembled in your kit.

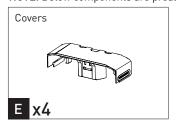

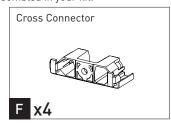

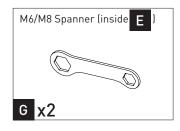

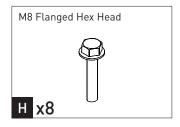

Tools Required:

- T1 Marker (if trimming NS bar)
- T2 Saw (if trimming NS bar)
- T3 Tape Measure
- T4 13mm Socket wrench
- T5 Impact Driver with extension and 13mm socket




Safety Gear:







NOTES:

- · While we recommend tower positions found on fitting supplements, they are only recommendations and not compulsory.
- You may fit more than two NS bars at any one time.

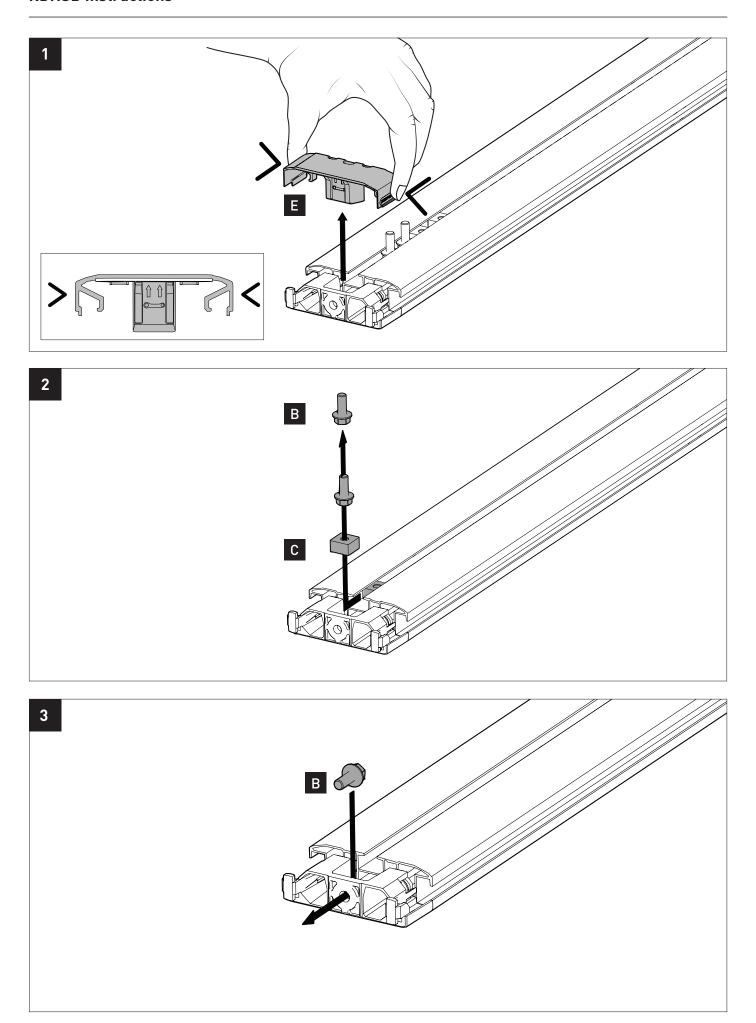

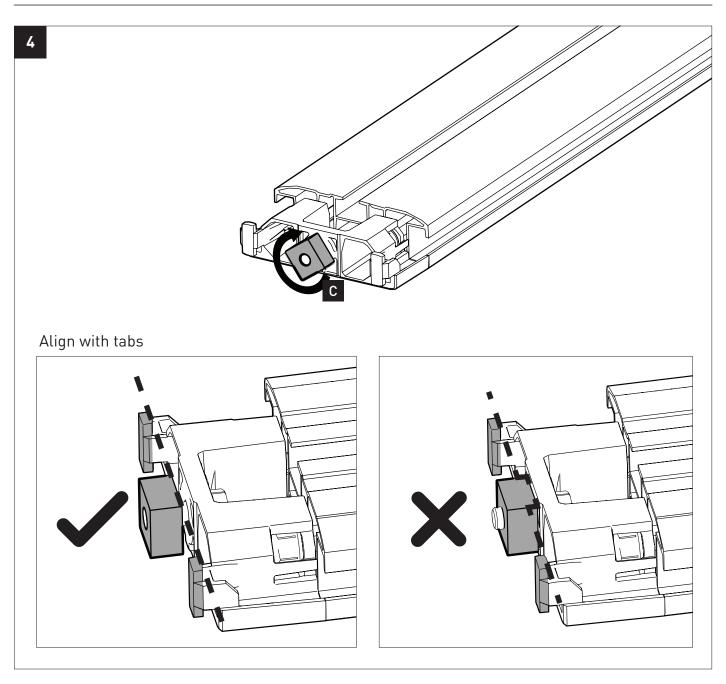

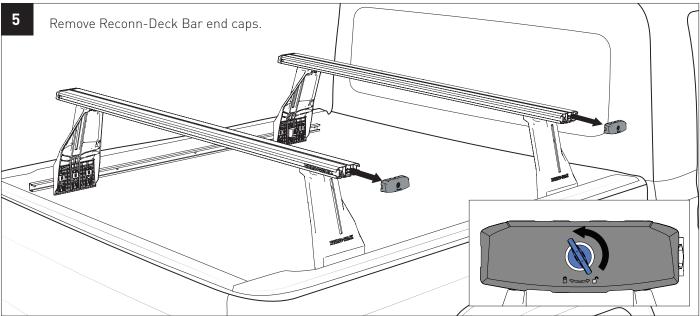

RDNSB Instructions

6 Determine your tower positions.

Tower positions vary depending on your vehicle & the bed rack system. When installing:

USING RECOMMENDED LEG POSITIONS


Refer to your vehicle's fitting supplement for its recommended tower positions





• IF THERE IS NOT A RECOMMENDED TOWER POSITION FOR YOUR VIEHICLE/CONFIGURATION, POSITION THE TOWERS AT STEP 8 AS DESIRED


Remove from all towers

Loosen all towers lightly so they are fixed but can slide along rail

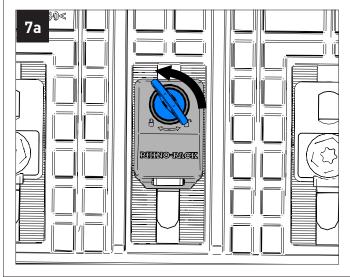


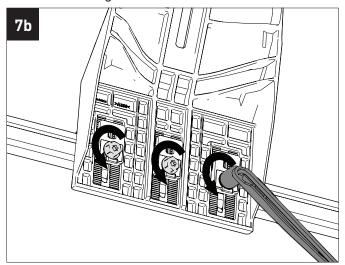


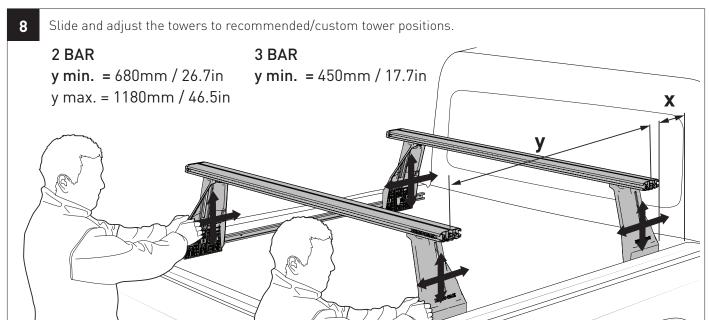

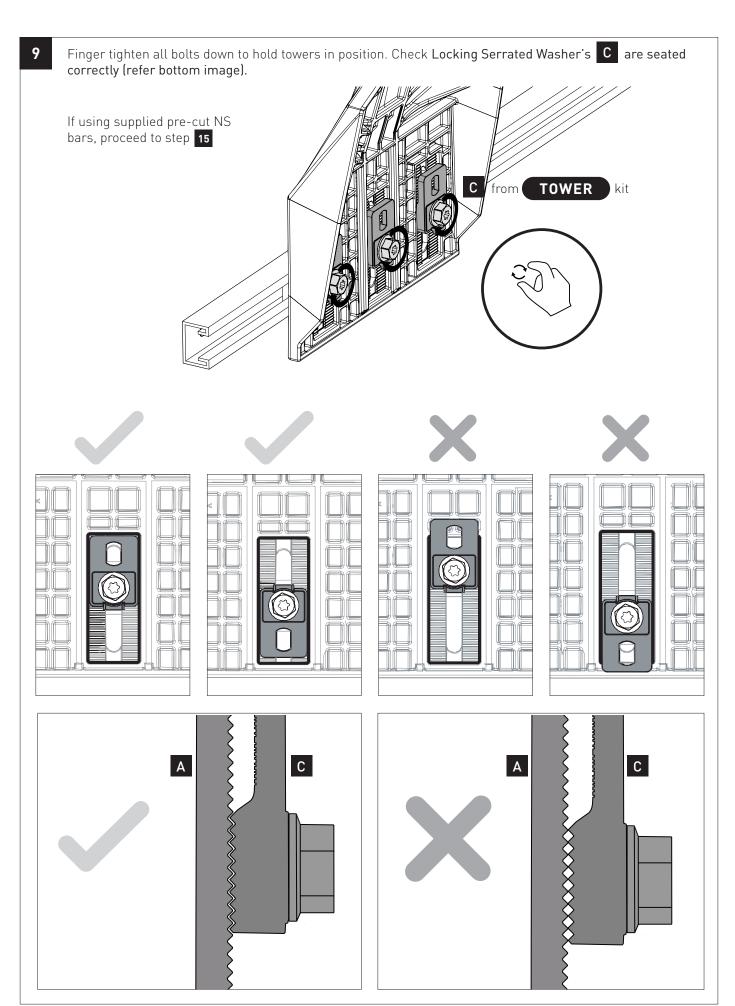



Page 8 of 14

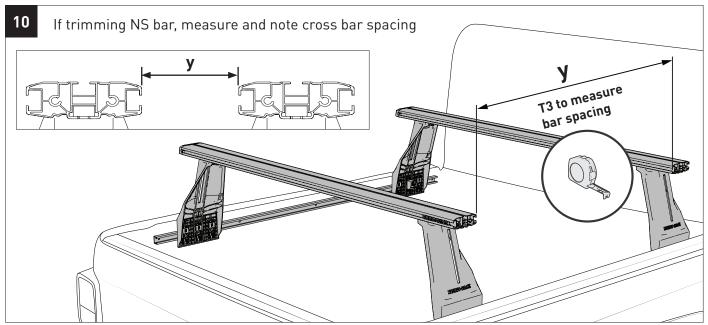


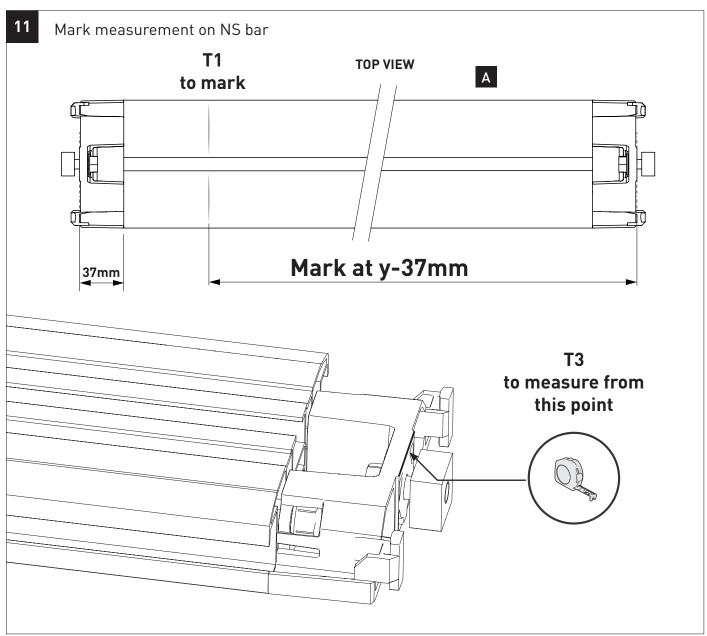


RDNSB Instructions

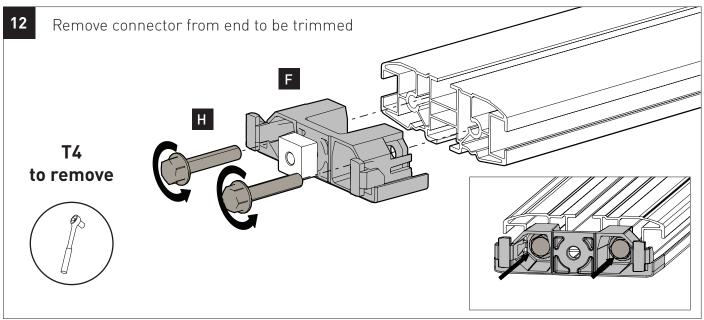

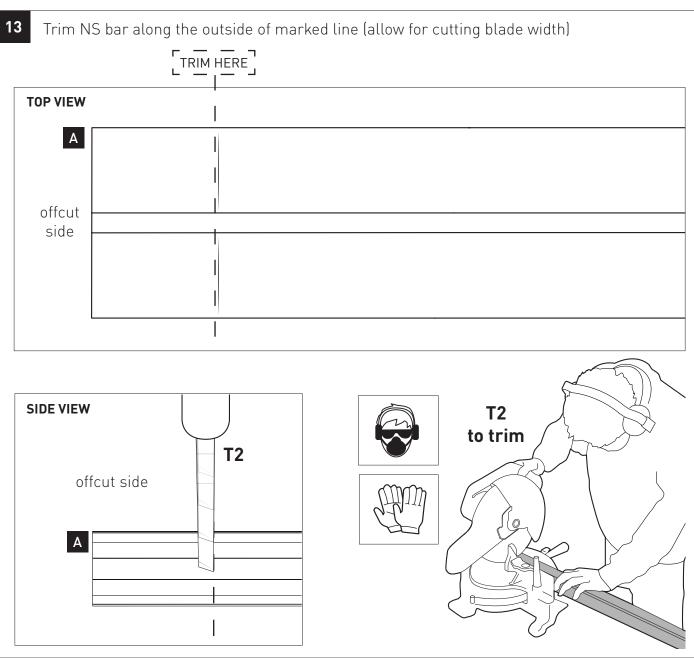

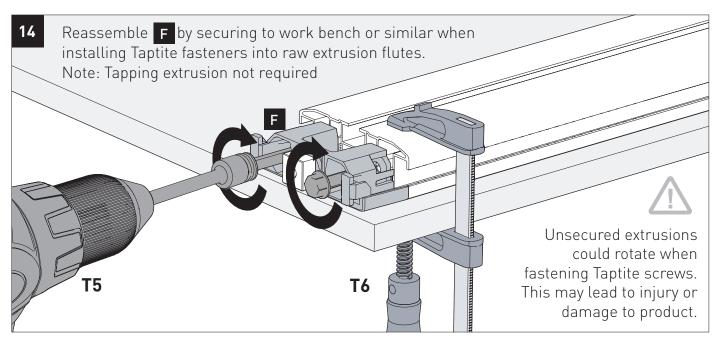

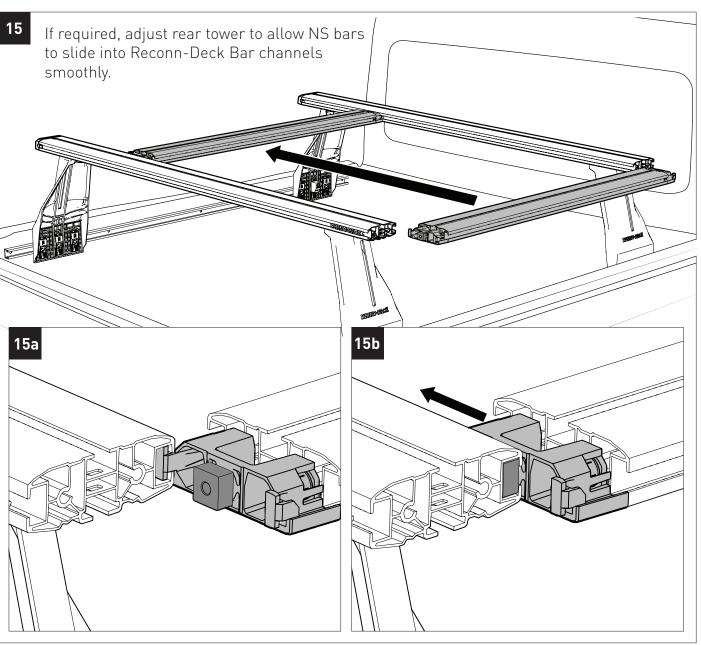

RDNSB Instructions

