

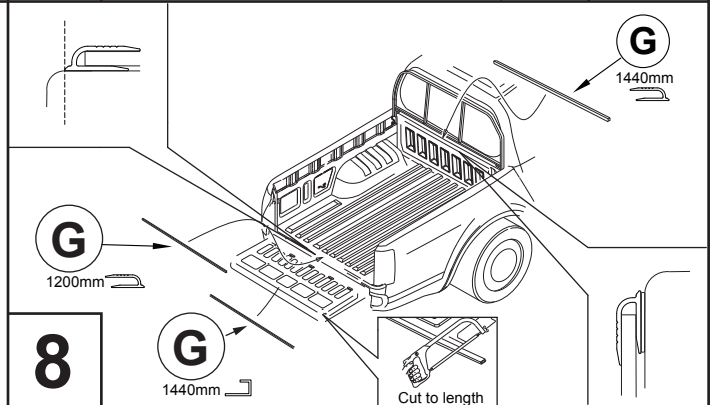
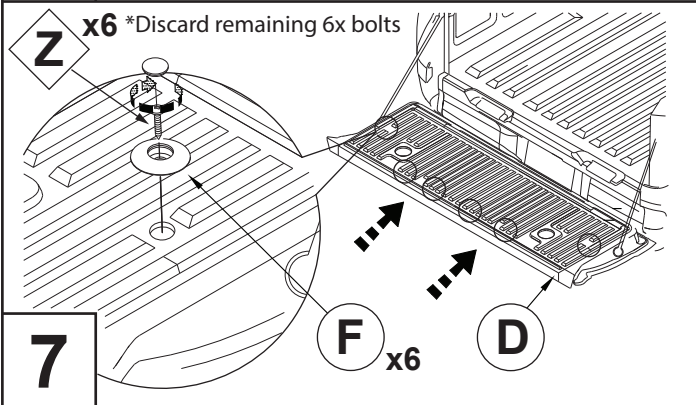
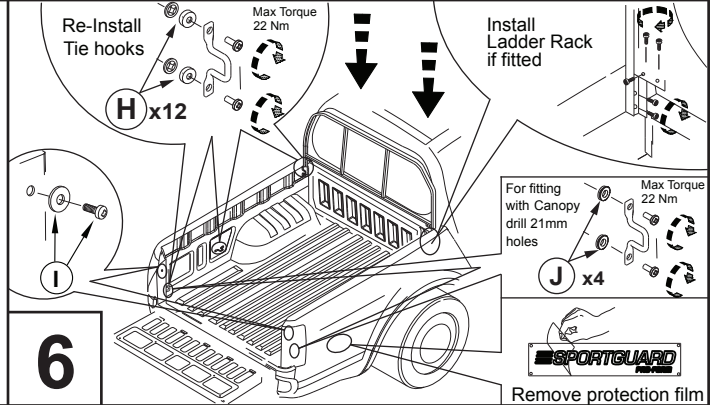
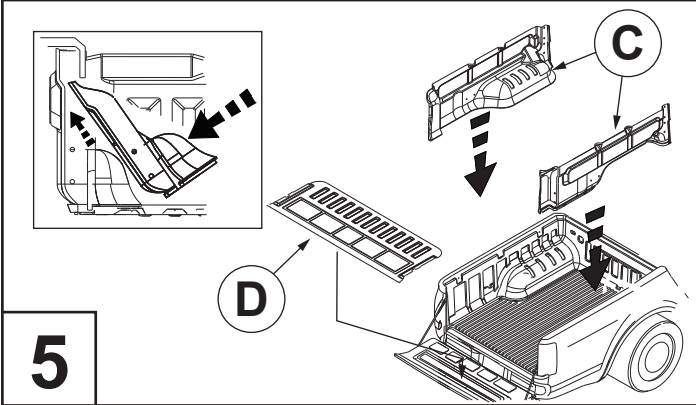
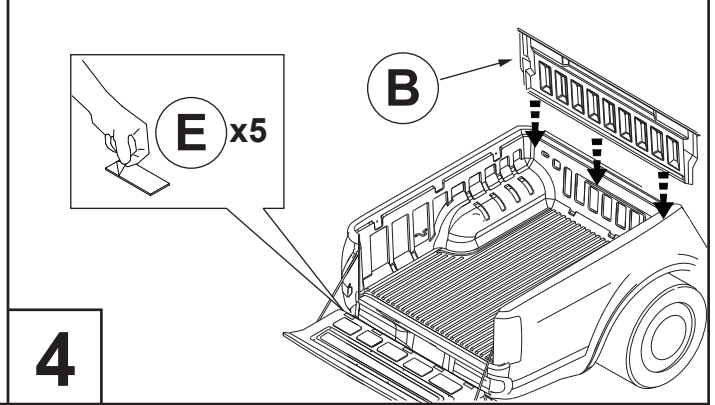
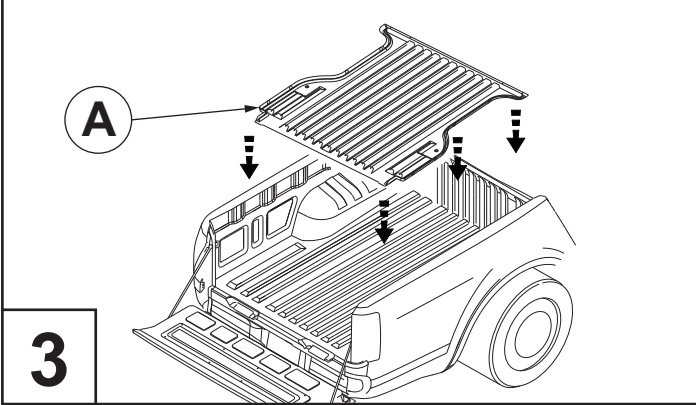


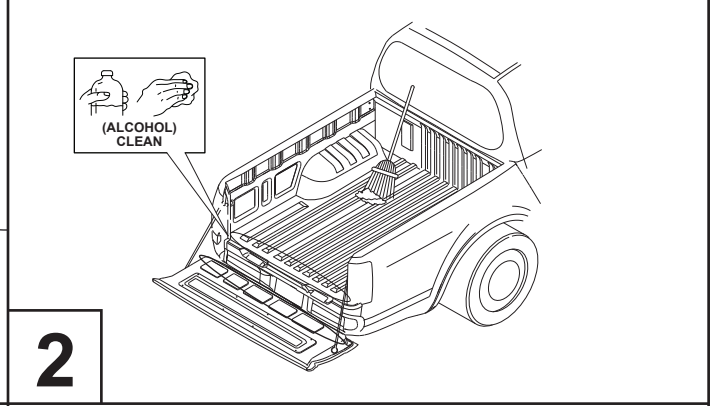

INSTALLATION INSTRUCTIONS (K642) SPORTGUARD FORD-MAZDA RANGER-BT50 2011

A floor X1	B front panel X1	C LHS X1 RHS X1	D tailgate X1	E tab X5	F dome cap X6	G 1440mm X1 1200mm X1 1440mm X1	H spacer X12 retaining ring X12	I rear post bolt X2	J Ascent Canopies spacer X4
--------------------------	--------------------------------	-------------------------------	-----------------------------	------------------------	-----------------------------	---	--	-----------------------------------	---

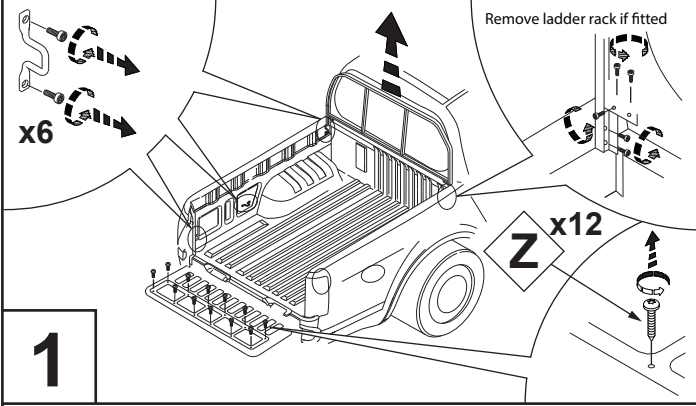

Fitting Kit Number	Manufacturer	Model Type	Year	Stockist	Cab Size	Product	Revision	Date	Page
K642	Ford/Mazda	Ranger/BT-50	2011	General	DC	SPORTGUARD	1	29/05/15	1 of 1