

FK34

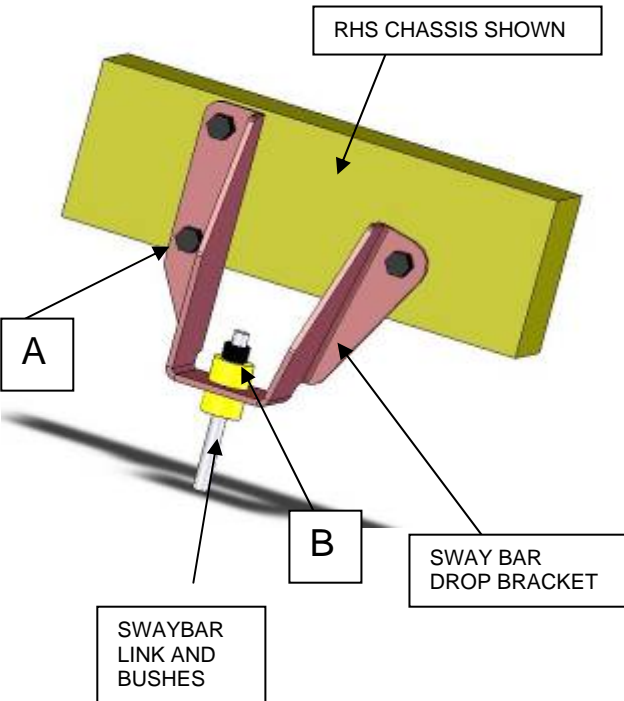
78 SERIES TOYOTA TROOP CARRIER

2007

CONTENTS

Part Number	Qty	Description
3757538L	1	LEFT SIDE DROP BRACKET
3757538R	1	RIGHT SIDE DROP BRACKET

INSTALLATION PROCEDURE

	<ol style="list-style-type: none"> 1. This kit is a straight replacement for the OE swaybar drop bracket. 2. Remove nuts from sway bar link and bushes (B) and let it swing down out of the way. 3. Remove three OE bolts (A) holding drop bracket to chassis and remove. 4. Replace with new bracket using OE bolts. 5. Repeat both sides of vehicle . NOTING :On drivers side make sure there is sufficient clearance with the fuel and brake lines. 6. Swing swaybar back up and replace swaybar link bracket using OE bushes, washers and nut in reverse order of removal.
------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------