

## ARB Esperance Rooftop Tent - Wind Deflector Fitting Instructions

### Tools Required (Included)

- 5.2mm drill bit
- M6 Tap
- 4.0mm Allen Key

### Instructions

1. Position the wind deflector against the leading edge of the Rooftop Tent. Ensure that the cut-out for the spring steel rod holder is positioned as per the picture below.




## ARB Esperance Rooftop Tent - Wind Deflector Fitting Instructions

2. Mark the position of the 4 x fixing screws on the leading edge of the Rooftop Tent



## ARB Esperance Rooftop Tent - Wind Deflector Fitting Instructions

3. Drill the holes for the attachment screws using a 5.2mm drill bit

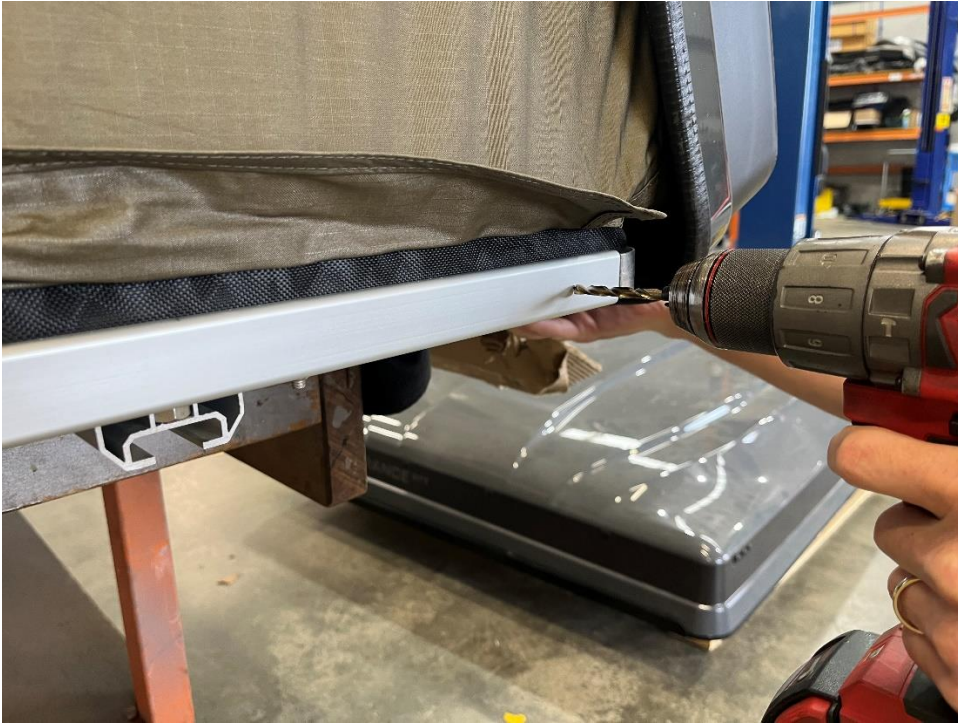

4. Tap the hole with a M6 tap



## ARB Esperance Rooftop Tent - Wind Deflector Fitting Instructions

5. Attach the wind deflector to the leading edge of the Rooftop Tent with the 4 x attachment screws and the 4.0mm Allen Key

